



Beam Installation Instructions


1. Mount Boxes to Brackets with 10/32 X 3/16" screws.

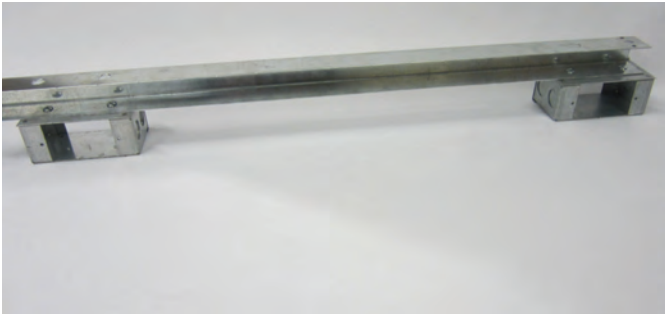

2. Use existing holes to drill 1/4" clearance holes for mounting screws in step 3. (Bottom view shown in photo)

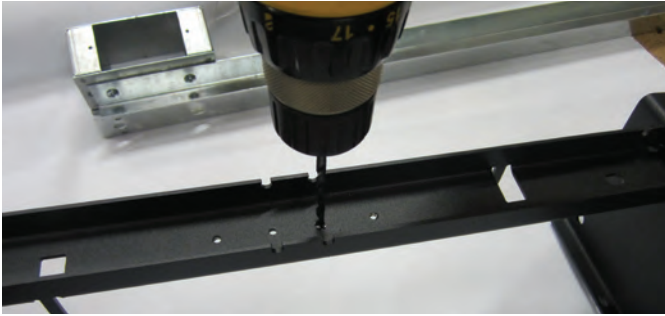

3. Mount bracket with a minimum of 4 10/32 X 1/2" screws on 5' & 6' beams & minimum of 6 on 4' & 8' beams. (Bottom view shown)

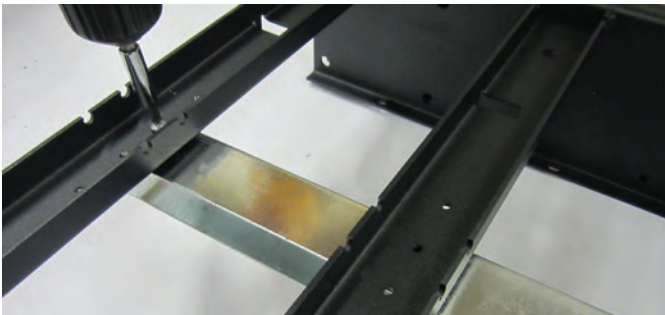

4. Use #8 drill point when necessary for extra support.



5. Flex, wire and trim receptacles. (Top view shown in photo)



6. Install covers. (Top view shown)

