

# Nevi Link Installation guide.

1. Remove cover and bar from furniture.


2. Mount the off set half of the A-175 bracket to the bar using 4 #10 X 1/2" SMS.



3. Mount boxes to flat half of A-175 bracket using 10-32X3/16 THMS. Note: This furniture only allows for single sided receptacles. \*\*Bracket spacing is for the two left openings or two right openings each. They can be combined for 2 on each side.




4. Attach two halves of A-175 bracket together using 4 10-32 X3/8 PHMS.

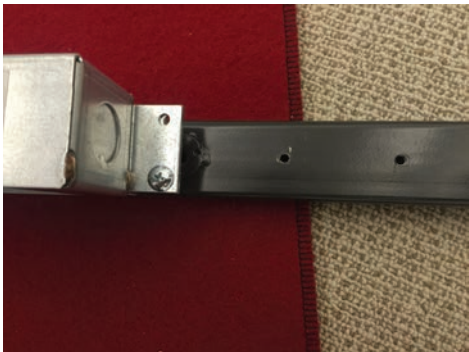

5. Repeat steps 1-4 for opposite side.



\*\*

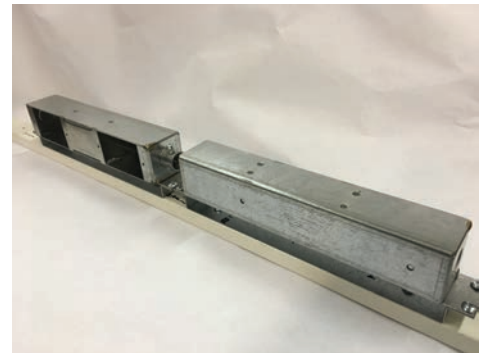

6. Install bar into furniture.



7. Pipe and wire according to local electrical codes.

8. Install cover.

